

HONEYCOMB AND PLEATED SHADES



3DAYBLINDS™
YOU'LL LOVE THE TREATMENT

GETTING STARTED


A few simple tools are required:



Steel Tape Measure



Pencil

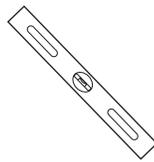

Level



Power Drill and Drill Bits



Flathead & Phillips Screwdriver



Awl (or tool for starting a screw hole)

Included in your order is all the hardware necessary for a normal installation. Depending on the mounting surface, fasteners other than the screws provided may be required. Wall board and plaster require the use of anchors such as expansion or toggle bolts. Bricks, tile and stone need special plugs and drill bits. Wood should always be pre-drilled to avoid splitting.


Professional installation is also available in most areas, call 800-800-3329.

STANDARD HARDWARE


Screws




Mounting Brackets

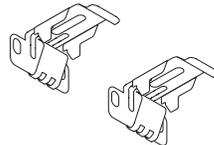


OPTIONAL HARDWARE

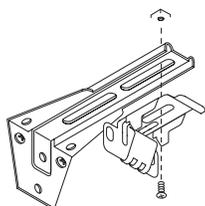

Extension Bracket with Nuts and Bolts

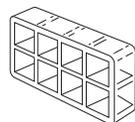

Spacers

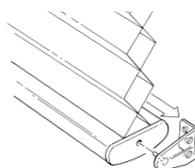


Hold Down Brackets with Screws

BRACKET INFORMATION

The brackets you received with your product are required for proper installation. Brackets should be installed 3" from each end. Any additional brackets will need to be evenly spaced between the two end brackets.

INSIDE MOUNT

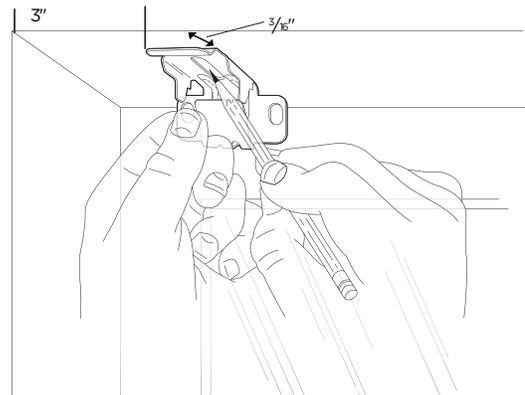


- Brackets should be installed 3" in from each corner of the window and $\frac{3}{16}$ " back from the front edge of the window casing.
- Additional brackets, if included, are **REQUIRED** for proper installation and should be installed evenly spaced between the two end brackets.
- Proceed to "Shade Installation".

OUTSIDE MOUNT


NOTE: You will be using your shade with mounting brackets attached to the headrail to mark the position of the brackets on your wall or molding. DO NOT CUT the cellophane wrapping as the fabric or the cords supporting the shade may be inadvertently cut. Unwrap the cellophane and unwind the cords from around the headrail.

- Attach brackets to the headrail 3" from each end. Additional brackets, if included, are REQUIRED for proper installation and should be spaced evenly over the width of the headrail. Lower the shade to it's full length. (See "Shade Operation".)

NOTE: If using extension brackets, attach mounting brackets to extension brackets with nuts and bolts before attaching brackets to headrail. (See "Optional Accessories".)

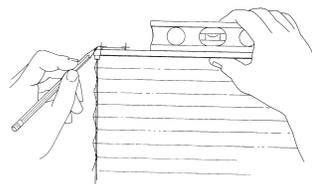


- Hold the shade up to the desired mounting position over the window. Once the shade is level, mark the wall or molding on either side and top of each mounting bracket.

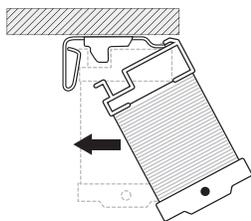

- Remove the mounting brackets from the headrail by pushing back and up on the "tail" of the bracket.



- Fasten brackets to wall where marked. 1/2" of flat mounting surface is required to mount your Shade.

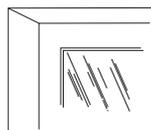


- Proceed to "Shade Installation"


END MOUNT

An end mount is recommended for shades being installed with an arch top or for inside mount applications where there is no alternative mounting surface.


NOTE: You will be using your shade with mounting brackets attached to the headrail to mark the position of the brackets in your window opening. DO NOT CUT the cellophane wrapping as the fabric or cords supporting the shade may be inadvertently cut. Unwrap the cellophane and unwind the cords from around the headrail.

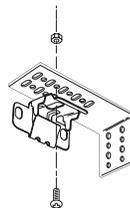


- Attach the mounting brackets to each extension bracket using the holes indicated in the diagram. Attach brackets to the headrail 3" from each end. Lower the shade to it's full length. (See "Shade Operation".)

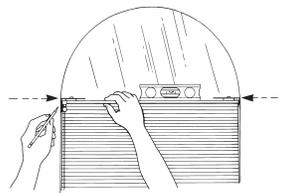


- With the mounting brackets attached, hold the shade up to the desired mounting position inside the window casing.

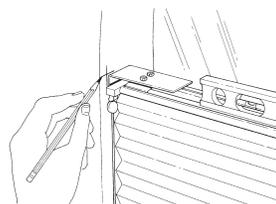

- Once the shade is level, recess the shade 1/4" from the front edge of the window casing and mark the wall on the front side and top edge of each extension bracket.

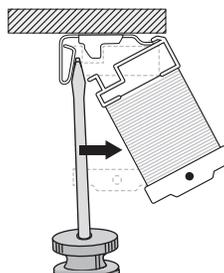

- Remove bracket by using a flat head screw driver and push up between racket and head rail.

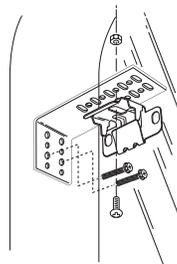


- Install an assembled end mounting bracket at each set of marks in your window opening.

SHADE INSTALLATION

If you have not already done so, unwrap the cellophane from around the shade. DO NOT CUT the cellophane as the fabric or the cords supporting the shade may be inadvertently cut. Also, unwind the shade cord and let it hang down in front of the shade.

NOTE: If you ordered a Top Down only shade, the lift cords have been pulled up through the top of the shade and wrapped to the headrail. When you unwrap the cellophane, the cords will be allowed to hang freely. Before installing the headrail, make sure the cords are not wrapped around the top of the headrail.

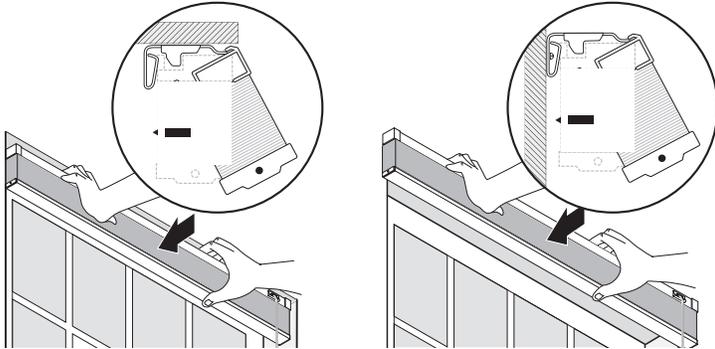

SHADE OPERATION

STANDARD SHADE

- To raise the shade, pull the draw cords down.
- To engage the lock, pull the cords down and toward the outside of the shade.
- To lower the shade, pull the draw cords down and toward the center of the shade and allow the cords to slide slowly through your hand.

TOP DOWN BOTTOM UP


Follow “Standard Shade” instructions above for shade operation. This shade is different because it has two sets of cords. One set of cords controls the center rail the other is for the bottom rail.

TOP DOWN

Follow “Standard Shade” instructions above for shade operation. This shade is slightly different because it has one set of cords that control the center rail only. The bottom rail is always in the down position.


SHADE LENGTH ADJUSTMENT

If shade length adjustment is necessary the shade can be adjusted by an inch longer or shorter. Firmly hold the cords and slide the snap tassel up to shorten or down to lengthen. The snap tassel is just above the cord joiner. Before adjusting the length of the shade allow the shade to hang 24 hours to relax the fabric.

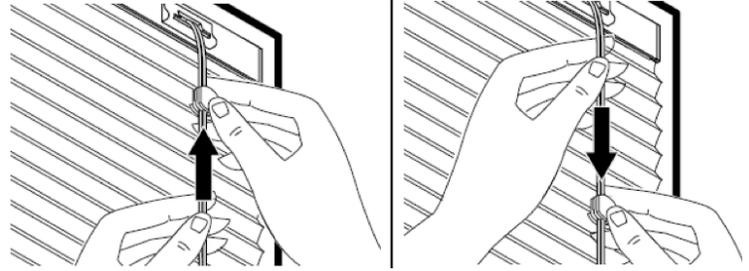

SHADE REMOVAL

Draw the shade completely up. (See “Shade Operation”) Push back on the “tail” of each mounting bracket.

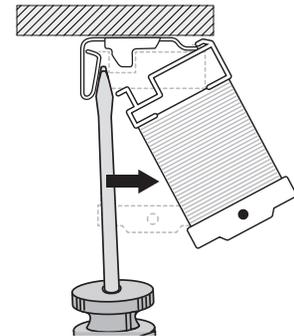


- Rotate the back of the headrail down and carefully lift the headrail off of the front hooks of the mounting brackets.

OPTIONAL ACCESSORIES

EXTENSION BRACKETS


Are used to project the shade up to 3" from the mounting surface. Extension brackets are available at an additional charge and are ideal if your shade must clear an obstruction such as a sliding glass door handle or window crank. Extension brackets require a flat vertical mounting surface of at least 1 3/8".

To assemble and mount:

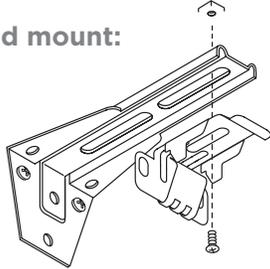

- Attach each mounting bracket to an extension bracket using the nuts bolts and washers provided.
- Mount the extension bracket to the wall per the instructions for an "Outside Mount", using a level and making certain that all mounting brackets are level and project the same distance from the mounting surface. For maximum stability, install the screws diagonally from one another.
- Install the shade per the directions for "Shade Installation".


SPACERS

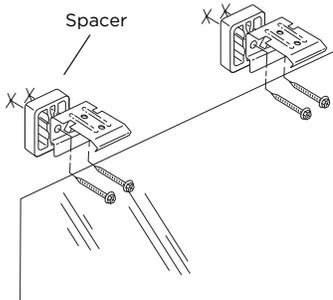


Spacers are available for use on windows with a projected molding. They are 3/8" thick and allow the shade to be mounted flush with the outside edge of any standard window molding. They are available by contacting our Customer Care Department at 800-800-3329.

HOLD DOWN BRACKETS

Hold down brackets are used primarily on shades mounted to doors or in motor homes. There are two small holes in the end caps that are covered by a thin plastic layer. Use the pin on the hold down bracket to push through the center of the end cap and it will break through the plastic layer.

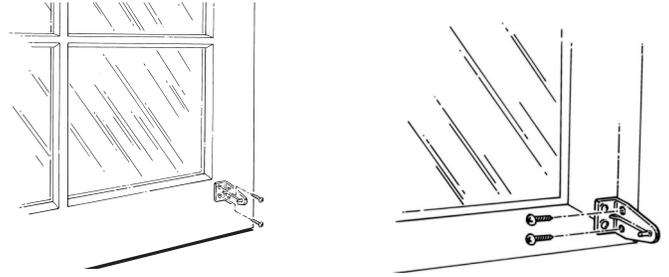

- With the shade lowered to it's full length, place the pin of each hold down bracket into the hole in each end of the bottom rail.
- Mark the mounting surface, either to the side or back of the window frame, through the holes in the hold down bracket. Make sure the hold down brackets are level and aligned with each other.
- Raise the shade and screw the hold down brackets into the mounting surface using the screws provided.

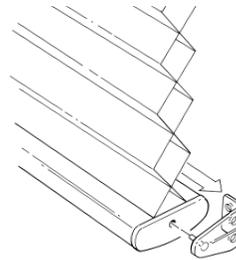

- Lower the shade and flex the hold down bracket outward so that the pin can be inserted into the hole in the end cap.



WARNING

Young children can STRANGLE in cord and bead chain loops and in the loop(s) above the cord connector. They can also wrap cords around their necks and STRANGLE.



- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

ANSI/WMCA A100.1-2012 5.2.3



3DAYBLINDS™
YOU'LL LOVE THE TREATMENT
800-800-3329 | 3dayblinds.com