




GETTING STARTED


A few simple tools are required:

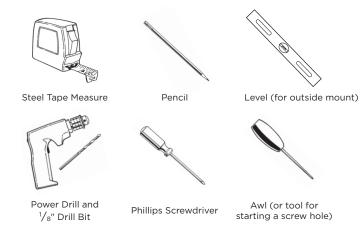


Included are the screws needed for a normal insallation. Depending on the mounting surface, fasteners other the the screws provided may be required. Wallboard and plaster require the use of anchors such as expansion togle bolts. Bricks, tile and stone need special plugs and drill bits. Wood should always be pre-drilled to avoid splitting.

Professional installation is also available at most 3 Day Blinds locations.

STANDARD HARDWARE

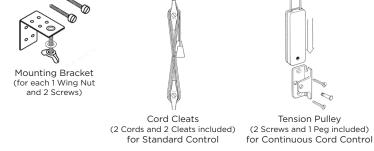

OPTIONAL HARDWARE

 


Unpack your new Woven Wood Shade and remove all parts before discarding the packaging. Leave the shade in a closed position.

MOUNTING BRACKET INSTALLATION


This shade was shipped with the required number of brackets as indicated in the chart below:

SHADE WIDTH	NUMBER OF BRACKETS
16" - 48"	2
48 1/8" - 60"	3
60 1/8" - 84"	4
84 ½" and up	5

 INSIDE MOUNT




INSIDE MOUNT HEADRAIL INSTALLATION

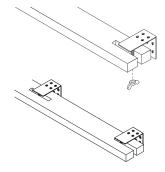

 Attach all mounting brackets to the headrail by placing the bolt on the mounting bracket through the slot in the top of the shade and loosely securing it with the wing nut.

 NOTE: Wide shades require center support brackets slots are pre-drilled in headrail.




 Hold the shade up to the desired mounting position and mark the drill holes at the top of the bracket.




 Remove the brackets from the shade and secure them at the pencil marks using the screws provided. Drill small pilot whole as required.


SIDE MOUNT

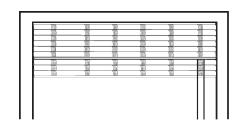

SIDE MOUNT HEADRAIL INSTALLATION

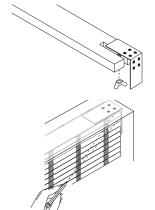

 - Attach all mounting brackets to the headrail by placing the bolt on the mounting bracket through the slot in the top of the shade and loosely securing it with the wing nut.
- Hold the shape up to the desired mounting position and mark the drill holes at the side of the bracket.




 Remove the brackets from the shade and secure them at the pencil marks using the screws provided. Drill a small pilot hole as required.

OUTSIDE MOUNT




OUTSIDE MOUNT HEADRAIL INSTALLATION

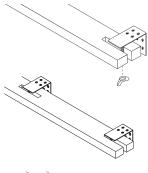

 Attach all mounting brackets to the headrail by placing the bolt on the mounting bracket through the slot in the top of the shade and loosely securing it with the wing nut.

 NOTE: Wide shades require center support brackets slots are pre-drilled in headrail.




 Hold the shade up to the desired mounting position and mark the drill holes at the top of the bracket.



 Remove the brackets from the shade and secure them at the pencil marks using the screws provided. Drill small pilot whole as required.


SHADE INSTALLATION

Place the shades into the mounting brackets and securely tighten the wing nut.

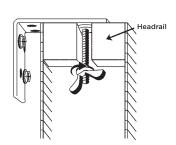

VALANCE INSTALLATION


STANDARD OUTSIDE MOUNT VALANCE RETURNS

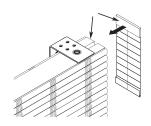

 After your shade is installed, attach the valance returns by affixing the velcro strip on the (side) returns to the corresponding velcro mat on each end of the headrail.

OPTIONAL WOOD VALANCE


Return Assembly

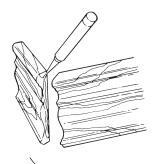

NOTE: If you did not order valance returns, go to Attaching The Valance.

 Apply a thin coat of glue to the mitered end of both the valance and the valance returns.

 
CAUTION: Do not get glue on the painted or stained surface of the valance. Avoid contact with skin.



- Repeat this procedure for the other end of the valance.
- Allow the glue to dry for at least 10 minutes before installing the valance.

Attaching the Valance

Attach valance to headrail using pre-attached velcro strips.

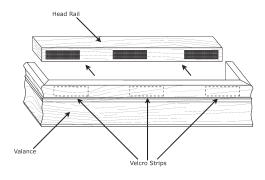

ATTACHING SAFETY DEVICES

STANDARD CONTROL - CORD CLEATS



- To reduce the possibility of strangulation, all cords must be kept out of the reach of children, including infants. Installing and utilizing cord cleats are an effective way to implement this essential precaution. Attach the two cord cleats approximately 6" apart at a height where they will be out of the reach of children.
- Once the cleats are attached, simply wrap the excess cord around them after each use of the shade.

CONTINUOUS CORD CONTROL - TENSION PULLEY


The Consumer Product Safety Commission (CPSC) requires the use of a Tension Pulley on all loop cord systems. The use of such a device is intended to significantly reduce the occurrence of infant or small child strangulation injuries or death resulting from the looped pull cords on various window treatment products.

The Tension Pulley is installed on the draw cord at the factory.

The Tension Pulley should be mounted in the proper position to pull the cord taut in order to reduce the possibility of injury, but do not apply to much tension to the cord or your blind will not operate properly.

For option 1 or option 2:

- Position the Tension Pulley bracket against the wall or window frame.
- Use 2 screws through the holes in the Tension Pulley bracket to mount it.
- Insert the tension pulley into the bracket and push the pin through the bracket and tension pulley to secure it into place.

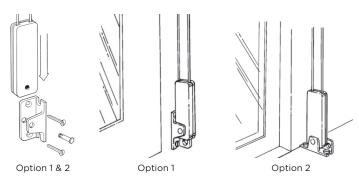


Option 3


For option 3:

- Position the Tension Pulley against the wall or window frame.
- Use 1 screw through the hole in the tension pulley to secure it into place.

SHADE OPERATION

 STANDARD CONTROL




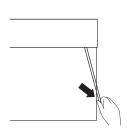


- To lower the shade, hold all of the cords and pull the cords down slightly toward the center of the shade. While holding the cord toward the center of the shade, let the cord run through your hand and lower it to the desired position. Lock the cord into position by moving it to the outside of the shade and releasing it to lock it into place.
- To raise the shade, hold all of the cords and pull until the shade is at the desired height. Lock the cord into position by moving it to the outside of the shade and releasing it to lock it into place.

NOTE: For Top Down and Top Down Bottom Up, if you ordered Top Down only, the standard control will lower and raise the shade from the top down. Top Down Bottom Up shades will have two sets of controls; one to raise and lower the shade as described in Standard Control and the other to raise and lower from the top down. In either case, the cords operate as standard.

 CONTINUOUS CORD CONTROL



 • To lower the shade, pull down on the cord. Continue to pull the cord down until the shade is at the desired height.




SHADE REMOVAL

 Raise the shade by pulling the opposite side of the cord.

→ | holdir

Hold shade securely and loosen and remove wing nut.

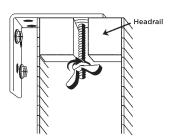

CARE & CLEANING

Periodic vacuuming with a brush attachment is all that is needed to ensure lasting beauty. Ultrasonic cleaning is not recomended.



WARNING

Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE.



- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.
- Attach tension device to wall or floor. This can prevent children from pulling cords and bead chains around their necks.

This product contains accessible cords on the back. Accessible cords on the back of Roman Style shades can be pulled out to form a loop, which can STRANGLE a young child.



• Children can climb furniture to access lift cords. Move cribs, playpens, and other furniture away from window coverings.

