


CELLULAR CORDLESS

Installation Instructions

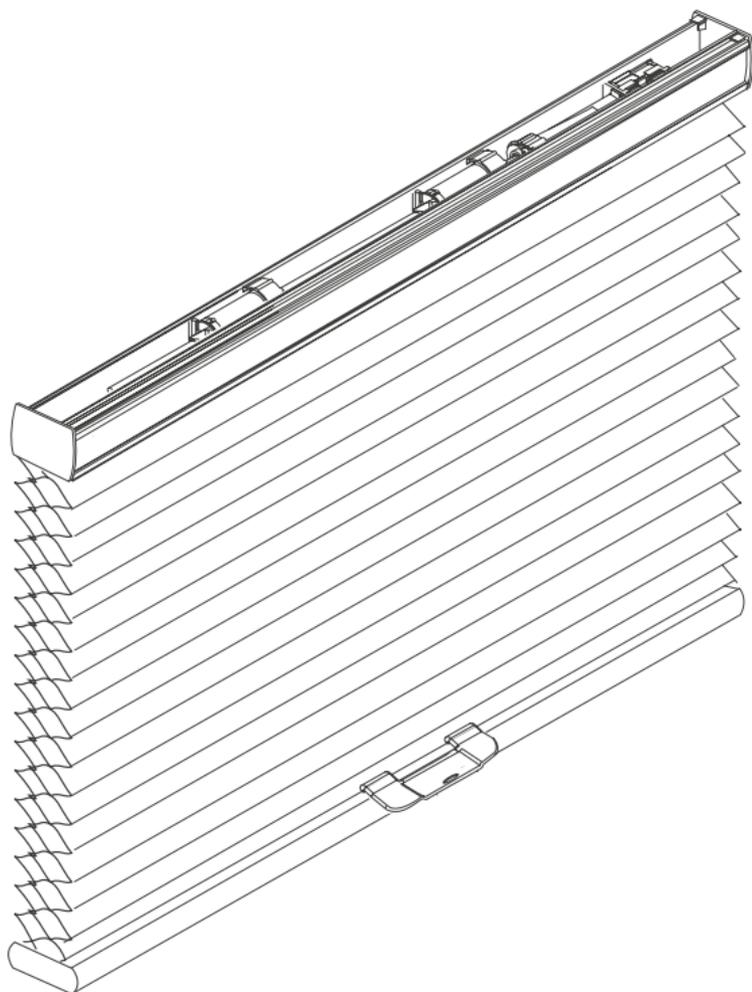

Ultima[®]

Congratulations on the purchase of your new window covering! 3 Day Blinds' products are an attractive choice for your home or office. Included with your purchase is all of the hardware you will need to successfully install your new shade. Please take a moment to read through these instructions before starting.

Bring Out Your Inner Decorator.[®]

3 DAY BLINDS[®]

America's Window Covering Specialists[®] Since 1978


1-800-590-SHOP | www.3day.com

BASICS

A few simple tools are required:

- Measuring tape
- Power drill, drill bits
- Hex head and/or Phillips driver bit
- Pencil

Additional fasteners other than those sent with your shade may be required depending on the mounting surface. Wallboard and plaster require the use of anchors such as expansion or toggle bolts. Brick, tile or stone need special plugs and drill bits. Remember to always pre-drill holes in wood to avoid splitting.

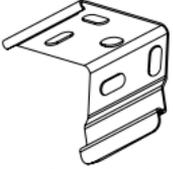


Standard
Mounting Bracket



Optional Extension
Bracket



Optional
Spacer Block

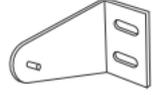

Optional Hold
Down Bracket

BRACKET INSTALLATION

Shades are shipped with the required number of brackets for proper installation. End brackets should be located to the outside of the cord spools. Depending on the width of the shade, additional brackets may be necessary, evenly spaced between the two end brackets.


For Shade Widths Of:

**Use this number
of brackets:**


Up to 40"	2
40" - 72"	3
72" - 84"	4
84" and up	5

Do Not place installation brackets over clear plastic spool covers (a & b) or over the transmission screw (c).

Improper placement of the brackets could result in poor Operation of the shade.

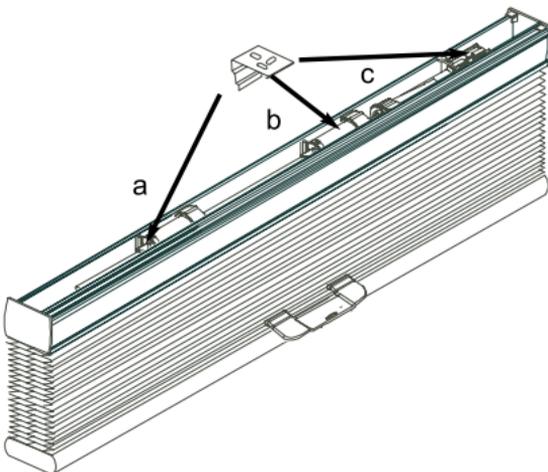


The center of the right end bracket must be placed 1" to 2" from the end, so that it does not interfere with the transmission screw.

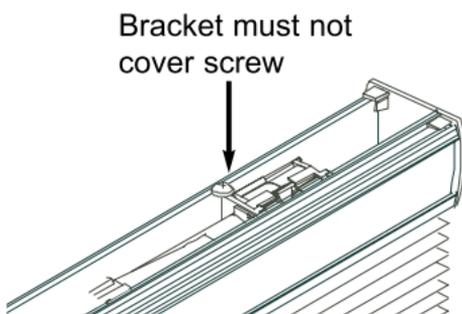

Using the Installation Bracket as a template, measure to the edge of the bracket and mark the hole locations with a pencil for drilling.


Brackets must be in line and level. The headrail must be level for the shade to operate properly.

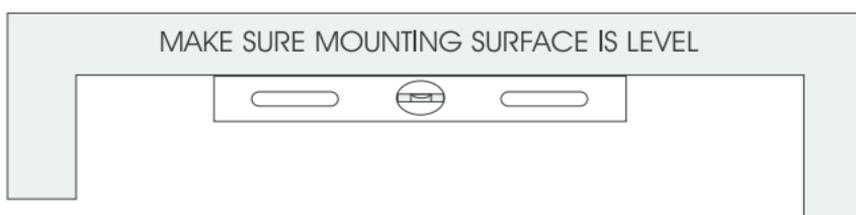

INSIDE OF CEILING MOUNTS


Use the top bracket holes

Note: Release tab is always the bottom of the bracket

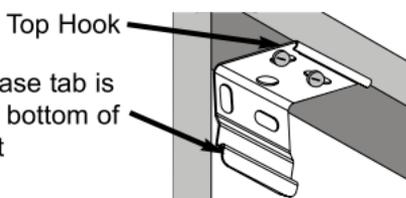


WALL OR OUTSIDE MOUNTS


Use the rear bracket holes

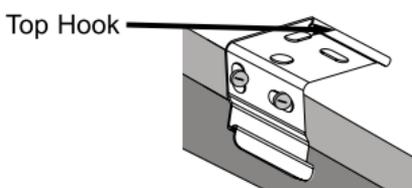

Outside Mount with Extension Bracket

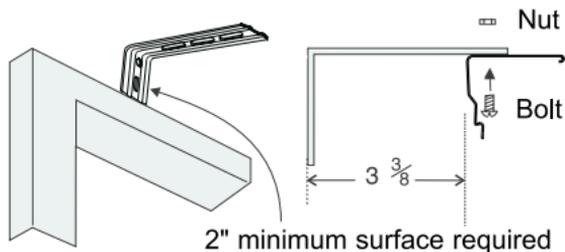


Sidemount with Extension Bracket

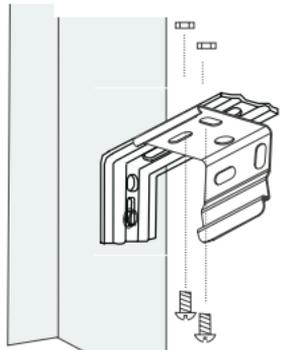

INSERTING THE HEADRAIL

First, lower the bottom rail about an inch. This will help keep the fabric from getting caught between the brackets and the headrail.

Position the headrail with the front lip (A) resting on the top hooks of all brackets. Make sure no fabric is pinched between the brackets and the headrail.



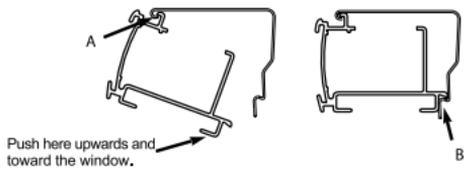


Push the bottom of the headrail firmly upwards and toward the window until the groove at the bottom of the headrail snaps into place, (B) as shown.

OPERATION


To lower the shade, pull down on the handle which is secured to the bottom rail. To raise the shade, push the bottom rail up. The shade will hold at any position when the bottom rail is released.

This product should be operated from the center of the bottom rail. For out-of-reach operation, an optional extension pole should be used.

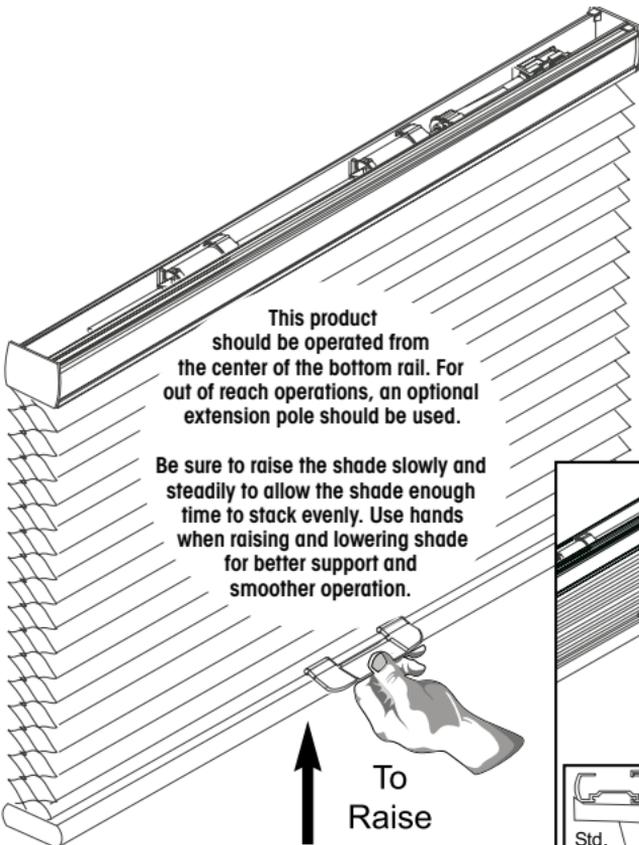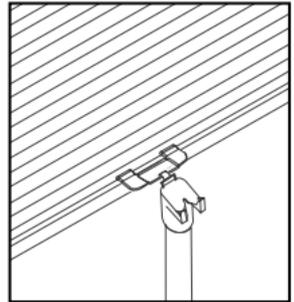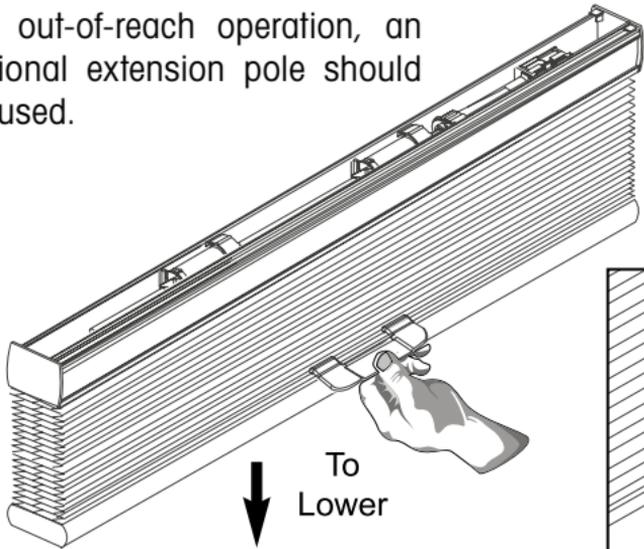


This product should be operated from the center of the bottom rail. For out of reach operations, an optional extension pole should be used.

Be sure to raise the shade slowly and steadily to allow the shade enough time to stack evenly. Use hands when raising and lowering shade for better support and smoother operation.

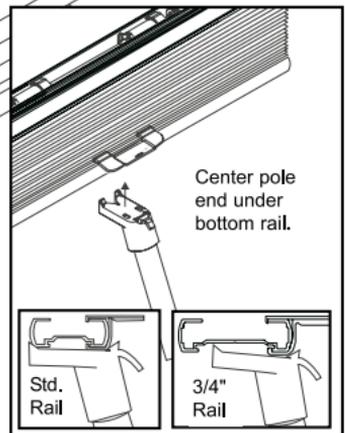

OPTIONAL HOLD DOWN BRACKET

Optional Hold down Brackets are mounted with the supplied screws. With the shade at its proper drop, place the pin of each Hold Down into the hole in each End Cap and mark the screw holes. Make sure the pins are level and aligned. Raise the shade, then screw the Hold Down Bracket into the mounting surface.

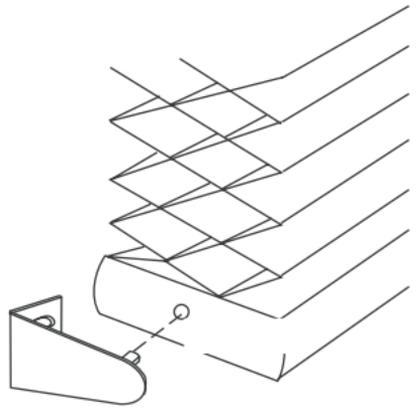

REMOVING THE HANDRAIL


To remove a shade, insert a screwdriver between the headrail and the bottom back of the bracket (tab which extends out slightly from each bracket).

Gently pry the screwdriver to release the bracket from the headrail. Take care not to damage the painted finish of the headrail.

As you release the brackets, support the headrail to keep it from falling.

INSTALLING THE HANDRAIL

Locate the center of the bottom rail. Gently lift fabric out of the way. Hook the top of the handle over the front lip on the bottom rail. Rotate handle down until it snaps into place.

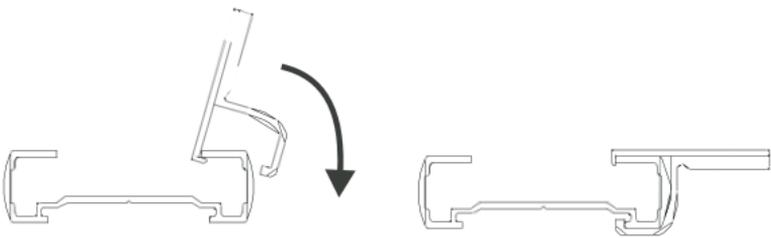

CLEANING AND CARE

The Honeycomb fabric is easy to care for. Regular dusting with a feather duster or vacuum cleaner brush is recommended. Most stains can be blotted with a damp sponge and mild detergent. For problem stains, the shade can be removed from the Installation brackets and soaked in warm water.


IMPORTANT: Do Not immerse headrail in water. When damp, raise shade tightly to re-crisp pleats. Before using anything stronger than mild detergent and lukewarm water, test an unobtrusive corner of the shade. If you have any questions, call you dealer for advice.

TROUBLE SHOOTING

Problem: Shade will not stay down.


Cause: Because the shade was fabricated primarily in the closed position, the fabric may want to spring up.

Repair: Gently pull down on a section of cells to relax the pleats (see diagram below). Repeat with another section of cells until the fabric is sufficiently relaxed. Do not raise the shade for 24 hours.

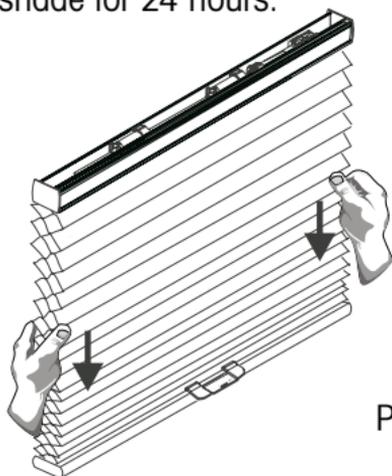

Gently stretch fabric.
Pull evenly on each side.

WARNING

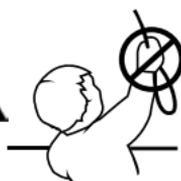

Young children can strangle in the loop of pull cords, chain and bead cords, and cords that run through window coverings. They can also wrap cords around their necks and STRANGLE.

1. Install safety devices that remove the cord loops or reduce access to cords, and
2. Move cribs and furniture away from window covering cords.

LIMITED LIFETIME WARRANTY

The manufacturer will repair or replace any part of the blind found to be defective in materials or workmanship at no cost to you. This warranty does not apply to any defect caused by improper installation, alteration, misuse, or exposure to excess moisture. This warranty does not cover normal wear and tear, such as natural deterioration and changes in color that may occur over an extended period of time.

Bring Out Your Inner Decorator.®

3 DAY BLINDS®

America's Window Covering Specialists® Since 1978

1-800-590-SHOP | www.3day.com