

ROLLER SHADE Deluxe

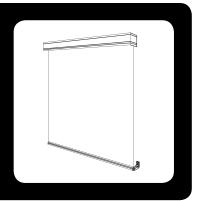



GETTING STARTED

A few simple tools are required:

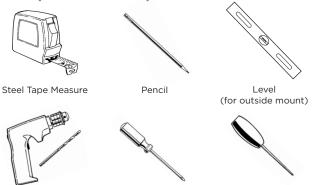

Included in your order is all the hardware necessary for a normal installation. Depending on the mounting surface, fasteners other than the screws provided may be required. Wall board and plaster require the use of anchors such as expansion or toggle bolts. Bricks, tile and stone need special plugs and drill bits. Wood should always be pre-drilled to avoid splitting.

Flathead & Phillips

Screwdriver

Professional installation is also available in most areas, call 800-800-3329.

STANDARD HARDWARE

Power Drill and

Drill Bits



Large Valance Mounting Bracket with Screws



Small Valance Mounting Bracket with Screws



Awl (or tool for


starting a screw hole)

Tensioner Pulley Bracket with Screws

BRACKET INFORMATION

The brackets you received with your product are REQUIRED for proper installation. Brackets should be installed at each end and any additional brackets will need to be evenly spaced between the two end brackets.


BRACKET PLACEMENT

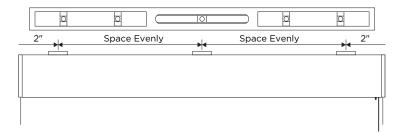

NOTE: Measure and mark all bracket locations before installing.

- Bracket placement is the same for inside and outside mounts..
- Measure 2" in from the ends of the headrail and mark the bracket location on the mounting surface.
- Space additional brackets evenly between the end brackets.
- Adjust the bracket placement to accommodate obstructions to the bottom rail, such as window cranks or handles.

OPTIONAL HARDWARE

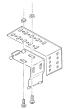

Extension Bracket





Hold Down Bracket



Spacers


INSIDE MOUNT

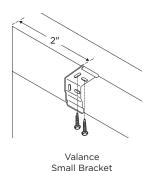

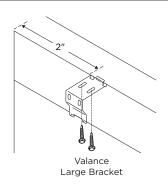

- Align the tops of each installation bracket to the top of the window opening and attach using two screws per bracket.
- Align the brackets to the inside of the mark on the mounting surface.
- Adjust the bracket placement to accommodate obstructions to the bottom rail, such as a window crank or handle.
- Use a carpenter's level to check that the brackets are level and aligned. Attach using two screws.


OUTSIDE MOUNT

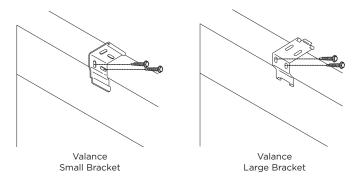

- Attach the back of each installation bracket using two screws per bracket.
- Align the brackets to the inside of the mark on the mounting surface.
- Use a carpenter's level to check that the brackets are level and aligned.


SHADE INSTALLATION

SMALL DELUXE HEADRAIL

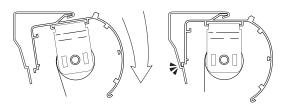

TO INSTALL: Hook the front top lip of the bracket into the channel on top of the rail. Rotate he back of the shade upward until the back of the rail engages into the bracket.

LARGE DELUXE HEADRAIL

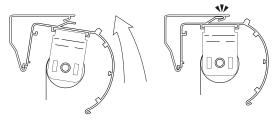

TO INSTALL: Hook the back of the rail onto the tab on the bottom of the bracket. Rotate the front of the rail upwards until the rail engages into the brackets

TENSIONER INSTALLATION

After installing the window covering, the Cord Tensioner must be mounted for the window covering to operate correctly. When properly installer, the Cord Tensioner functions as a safety device that makes the pull cord less accessible to children.

NOTE: If the mounting screws will not be secured into a wood stud, use wall anchors. For metal surfaces, pre-drill the holes and use sheet metal screws.

IMPORTANT!


- Install the Cord Tensioner in a location that minimizes accessibility to children and pets and where it will not interfere with its operation.
- Only supplied Cord Tensioners and hardware should be used.

MOUNTING OPTIONS

Option A - Inside mount without a bracket

Cord Tensioner used in an inside mount application without a mounting bracket.


 Locate the Cord Tensioner as close to the window as possible to minimize accessibility by children and pets.
 Be sure the Cord Tensioner is not placed in the path of the window covering when raising and lowering.

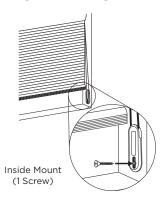

Option B - Inside mount with a bracket

Cord Tensioner using the mounting bracket in and inside mound application.


 Locate the Cord Tensioner as close to the window as possible to minimize accessibility by children and pets.
 Be sure the Cord Tensioner is not placed in the path of the window covering when raising and lowering.

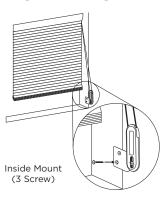

Option C - Outside mount

Cord Tensioner using the mounting brackets in an outside mount application.

 Locate the Cord Tensioner as close to the window as possible to minimize accessibility by children and pets.
 Be sure the Cord Tensioner is not placed in the path of the window covering when raising and lowering.

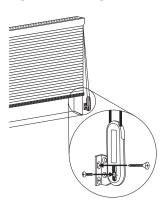

SHADE INSTALLATION

- If you have not already done so, unwrap the cellophane from around the shade. DO NOT CUT the cellophane as the fabric or the cords supporting the shade may be inadvertently cut. Also, unwind the shade cord and let it hang down in front of the shade.
- With the front of the shade facing you, hold the shade up to the mounting brackets and insert the back lip of the shade into the bottom groove on the bracket.




• Rotate the headrail up and back until it snaps into place.


SHADE OPERATION

- To raise the shade, pull on the side of the cord loop.
- To lower the shade, pull on the other side of the cord loop. After lowering the shade all the way, the shade will begin to raise if you continue to pull the cord in the same direction.

SHADE REMOVAL

SMALL DELUXE HEADRAIL

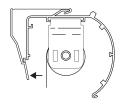

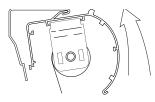

TO REMOVE: To remove the shade use a flathead screw driver and gently pry the bracket release tab between the bracket and the headrail in the back of the shade headrail. Repeat this for each bracket until the shade is free from the mounting brackets. Use Caution and support the shade while releasing it from the brackets so that the shade does no fall.

LARGE DELUXE HEADRAIL






TO REMOVE: To remove the shade use a flathead screw driver and gently pry the bracket release tab between the bracket and the headrail on the top of the shade headrail. Repeat this for each bracket until the shade is free from the mounting brackets. Use Caution and support the shade while releasing it from the brackets so that the shade does no fall.

OPTIONAL ACCESSORIES

EXTENSION BRACKETS


Extension Brackets are used to project the shade up to 3" from the mounting surface. Extension brackets are available at an additional charge and are ideal if your shade must clear an obstruction such as a sliding glass door handle or window crank. Extension brackets require a flat vertical mounting surface of at least $\frac{7}{8}$ ".

To assemble and mount

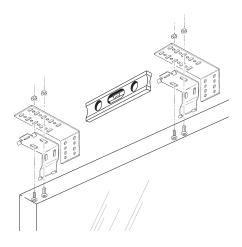

- Attach each mounting bracket to an extension bracket by using the nuts bolts and washers provided.
- Mount the extension bracket to the wall per the instructions for an "Outside Mount", using a level and making certain that all mounting brackets are level and project the same distance from the mounting surface.
 For maximum stability, install the screws diagonally from one another.
- Install the shade per the directions for "Shade Installation".

SPACERS

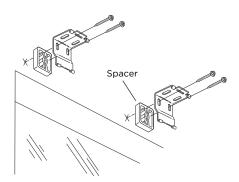


Spacers are available for use on windows with a projected molding. They are $^3/_8$ " thick and allow the shade to be mounted flush with the outside edge of any standard window molding. They are available by contacting our Customer Care Department at 800-800-3329.


W DOWN BRACKETS

Hold down brackets are used primarily on shades mounted to doors or in motor homes. There are two small holes in the end caps that are covered by a thin plastic layer. Use the pin on the hold down bracket to push through the center of the end cap and it will break through the plastic layer.



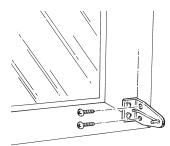

- With the shade lowered to it's full length, place the pin of each hold down bracket into the hole in each end of the bottom rail.
- Mark the mounting surface, either to the side or back of the window frame, through the holes in the hold down bracket.
 Make sure the hold down brackets are level and aligned with each other.
- Raise the shade and screw the hold down brackets into the mounting surface using the screws provided.

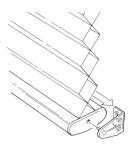

 Lower the shade and flex the hold down bracket outward so that the pin can be inserted into the hole in the end cap.

WARNING

Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE.



- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.
- Attach tension device to wall or floor. This can prevent children from pulling cords and bead chains around their necks. Fasteners provided with the tension device may not be appropriate for all mounting surfaces. Use appropriate anchors for the mounting surface conditions.

ANSI/WMCA A100.1-2012 5.2.4

