


HONEYCOMB SHADE ARCHES

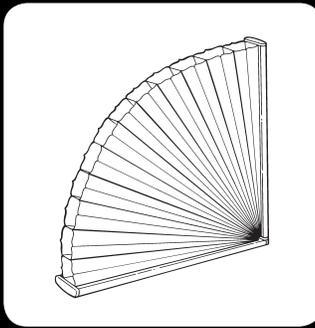

3DAYBLINDS®
YOU'LL LOVE THE TREATMENT

GETTING STARTED

A few simple tools are required:



Steel Tape Measure



Pencil



Level
(for outside mount)



Power Drill and
Drill Bits



Flathead & Phillips
Screwdriver



Awl (or tool for
starting a screw hole)


Included in your order is all the hardware necessary for a normal installation. Depending on the mounting surface, fasteners other than the screws provided may be required. Wall board and plaster require the use of anchors such as expansion or toggle bolts. Bricks, tile and stone need special plugs and drill bits. Wood should always be pre-drilled to avoid splitting.

Professional installation is also available in most areas, call 800-800-3329.

STANDARD HARDWARE



Screws

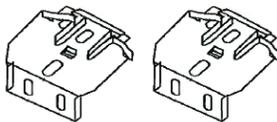


Mounting Brackets



Arch Support Clip(s)
with Screw(s)


OPTIONAL HARDWARE



Side Mount Bracket

INSIDE MOUNT


HALF ARCH INSTALLATION

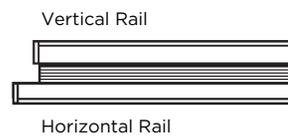


Vertical Rail

Horizontal Rail


- Your half arch has been shipped in the closed position. When fanned, the rails will form a 90 degree angle. Note that the vertical rail is shorter than the horizontal rail.

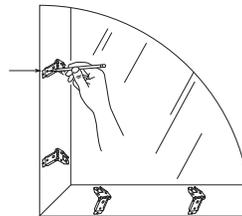


- Install brackets $\frac{1}{4}$ " in from the front edge and equally spaced on the vertical and horizontal sides of the window opening.



- Before fanning the shade, install the bottom rail onto the horizontal mounting clips by hooking the groove at the front of the rail into the mounting bracket hooks and rotate into place.

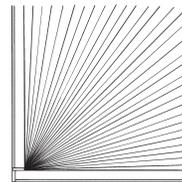

- Fan the shade so that the vertical rail rests upon the horizontal rail. Attach the vertical rail to the vertical brackets.

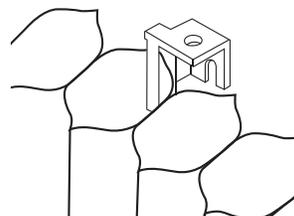


- Position one arch support clip at the center portion of the arch opening so that the clip holds a cell of the fabric. Install the arch support clip with a screw through the top of the clip. If required, space additional clips evenly along the arch. Place the appropriate cell of fabric into the arch support bracket(s).

NOTE: To avoid damaging your shade, remove the shade from the vertical brackets and collapse the arch while installing the arch support clips.

FULL ARCH INSTALLATION

Your arch top shade has been shipped in the closed position and inserted into its own bottom rail. Remove the end cap located opposite the arch stack.

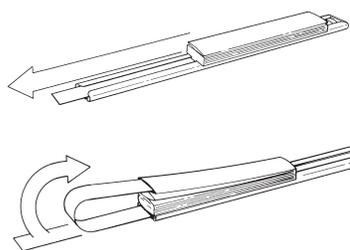

- One side of the arch has already been attached to an adhesive strip which has been inserted into the bottom rail. Slide the strip with the arch attached out of the bottom rail until the arch is even with the end of the bottom rail.

- **For MidCell, TwinCell and GrandCell Honeycomb Shades:**


Insert the loose end of the adhesive strip into the top cell of the arch. DO NOT remove the protective covering. Continue inserting the strip into the arch until there is no remaining slack.

- **For MiniCell Shades:**


The top cell has been slit to accommodate the adhesive strip. Remove the protective covering on the loose end of the adhesive strip. Fold the strip over so that it adheres to the top of the slit cell.

- **For Micro and 1" Pleated Shades:**


Remove the protective covering on the remaining adhesive strip. Fold the strip over so that it adheres to the top pleat on the stack.

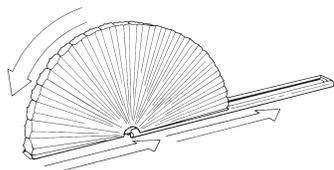


- Open the arch to its fully fanned position and gently insert the remaining half of the arch into the bottom rail. Only the very last cell which encases the adhesive strip should be inserted into the bottom rail.

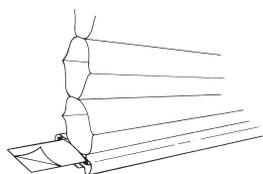

- For MidCell, TwinCell and Grand Cell only: Gently remove the protective covering from the last 2" of the adhesive strip. Gently press the cellular arch fabric against the adhesive to hold your arch securely in place.

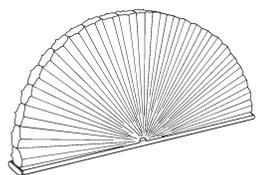

- Replace the end cap on the bottom rail of your fully assembled arch.

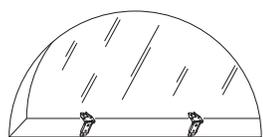


- Install brackets 1/4" in from the front edge of the sill and equally spaced as shown.

SHADE WITH ARCH INSTALLATION

You will be using your assembled arch top with mounting brackets attached to the bottom rail to mark the position of the brackets on your wall or molding.

An inside mount shade with an arch top requires a special type of installation to keep the shade and the arch in close proximity to each other. This type of installation requires an end mount bracket system.

Arch assembly

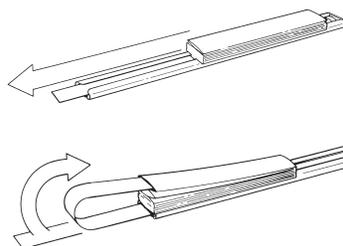

- One side of the arch has already been attached to an adhesive strip which has been inserted into the bottom rail. Slide the strip with the arch attached out of the bottom rail until the arch is even with the end of the bottom rail.

- **For MidCell, TwinCell and GrandCell Honeycomb Shades:**


Insert the loose end of the adhesive strip into the top cell of the arch. DO NOT remove the protective covering. Continue inserting the strip into the arch until there is no remaining slack.

- **For MiniCell Shades:**


The top cell has been slit to accommodate the adhesive strip. Remove the protective covering on the loose end of the adhesive strip. Fold the strip over so that it adheres to the top of the slit cell.

- **For Micro and 1" Pleated Shades:**


Remove the protective covering on the remaining adhesive strip. Fold the strip over so that it adheres to the top pleat on the stack.

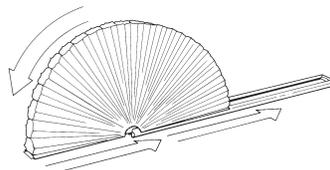

- Open the arch to its fully fanned position and gently insert the remaining half of the arch into the bottom rail. Only the very last cell which encases the adhesive strip should be inserted into the bottom rail.

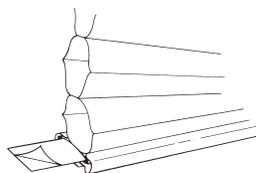


- For MidCell, TwinCell and Grand Cell only: Gently remove the protective covering from the last 2" of the adhesive strip. Gently press the cellular arch fabric against the adhesive to hold your arch securely in place.

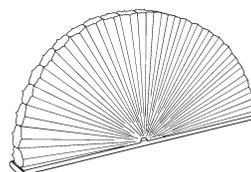


- Replace the end cap on the bottom rail of your fully assembled arch.

Bracket assembly and mount

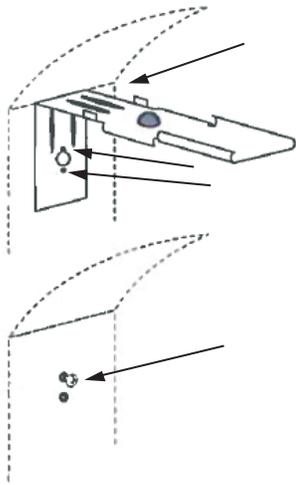


- Line up the top of the side mount bracket with the desired height of the top of the headrail.
- Mark holes for screws. Side mount brackets must be level. Remove side mount brackets and drill holes.
- Insert bugle head screws for keyhole slots only. Approximately $\frac{1}{8}$ " of the screw should be left protruding.

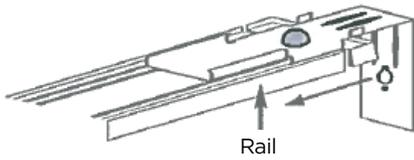


- Pull the cord lock assembly partially out of the headrail and slide the side mount bracket on as shown. Push the cord lock assembly and side mount bracket back all the way into the rail.


- Remove the end cap from the opposite end of the headrail. Slide the remaining side mount bracket on the headrail. Replace the end cap before sliding the side mount bracket all the way into the headrail.

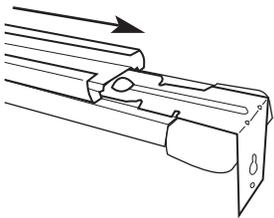

- Remove the end caps on the arch rail. Slide the arch rail onto the tabs on the top of the side mount bracket.

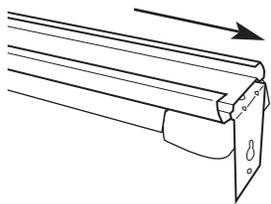


- Slide the rail all of the way to end of the side mount bracket.

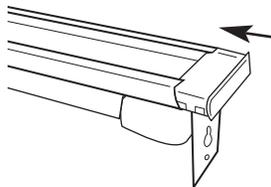

- Reattach the end caps.

- Hook one side mount bracket onto the screw in the window frame, using the keyhole slot. Bring the other end side mount bracket over the screw at the other side of the frame. Slide down, flexing bracket inward until the screw engages in the keyhole slot.
- Make sure both side mount brackets are slipped down all the way in the keyhole slot so that the screw is in the top portion of the keyhole slot. Install a screw in the bottom hole of each side mount bracket. Tighten all screws.





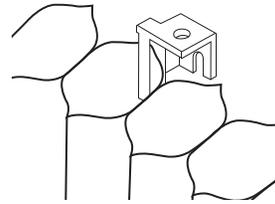


- Position one arch support clip at the center portion of the arch opening so that the clip holds a cell of the fabric. Install the arch support clip with a screw through the top of the clip. If required, space additional clips evenly along the arch. Place the appropriate cell of fabric into the arch support bracket(s).

Note: To avoid damaging your shade, allow the shade to gently fall forward out of the way while installing the arch support clips.

OUTSIDE MOUNT

HALF ARCH INSTALLATION

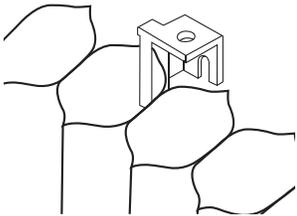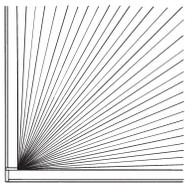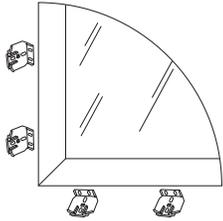
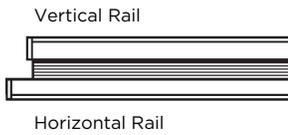


- Your half arch has been shipped in the closed position. When fanned, the rails will form a 90 degree angle. Note that the vertical rail is shorter than the horizontal rail.
- Install brackets in desired location on outside of the window sill or wall.
- Before fanning the shade, install the bottom rail onto the horizontal mounting clips by hooking the groove at the front of the rail into the mounting bracket hooks and rotate into place.
- Fan the shade so that the vertical rail rests upon the horizontal rail. Attach the vertical rail to the vertical brackets.
- Position one arch support clip at the center portion of the arch opening so that the clip holds a cell of the fabric. Install the arch support clip with a screw through the back of the clip. If required, space additional clips evenly along the arch. Place the appropriate cell of fabric into the arch support bracket(s).





NOTE: To avoid damaging your shade, remove the shade from the vertical brackets and collapse the arch while installing the arch support clips.

FULL ARCH INSTALLATION

Your arch top shade has been shipped in the closed position and inserted into it's own bottom rail. Remove the end cap located opposite the arch stack.



- One side of the arch has already been attached to an adhesive strip which has been inserted into the bottom rail. Slide the strip with the arch attached out of the bottom rail until the arch is even with the end of the bottom rail.
- **For MidCell, TwinCell and GrandCell Honeycomb Shades:** Insert the loose end of the adhesive strip into the top cell of the arch. DO NOT remove the protective covering. Continue inserting the strip into the arch until there is no remaining slack.
- **For MiniCell Shades:** The top cell has been slit to accommodate the adhesive strip. Remove the protective covering on the loose end of the adhesive strip. Fold the strip over so that it adheres to the top of the slit cell.
- **For Micro and 1" Pleated Shades:** Remove the protective covering on the remaining adhesive strip. Fold the strip over so that it adheres to the top pleat on the stack.

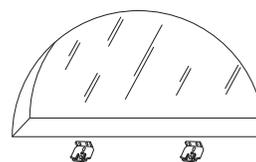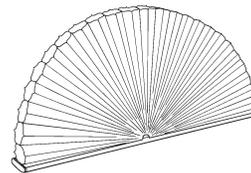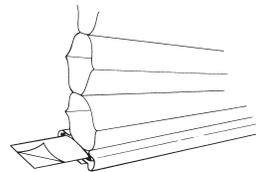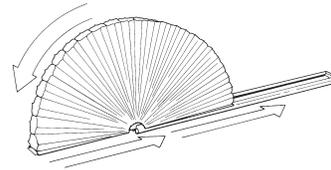


- Open the arch to it's fully fanned position and gently insert the remaining half of the arch into the bottom rail. Only the very last cell which encases the adhesive strip should be inserted into the bottom rail.
- For MidCell, TwinCell and Grand Cell only: Gently remove the protective covering from the last 2" of the adhesive strip. Gently press the cellular arch fabric against the adhesive to hold your arch securely in place.
- Replace the end cap on the bottom rail of your fully assembled arch.
- Install brackets in desired location on outside of the window sill or wall.

SHADE OPERATION

STANDARD SHADE

- To raise the shade, pull the draw cords down.
- To engage the lock, pull the cords down and toward the outside of the shade.

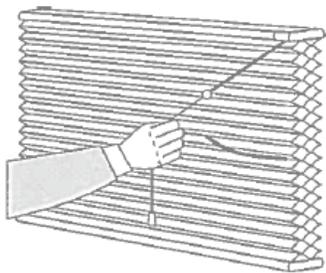

- To lower the shade, pull the draw cords down and toward the center of the shade and allow the cords to slide slowly through your hand.


TOP DOWN BOTTOM UP

Follow “Standard Shade” instructions above for shade operation. This shade is different because it has two sets of cords. One set of cords controls the center rail the other is for the bottom rail.

TOP DOWN

Follow “Standard Shade” instructions above for shade operation. This shade is slightly different because it has one set of cords that control the center rail only. The bottom rail is always in the down position.

LEVEL THE BOTTOM RAIL (IF NECESSARY)

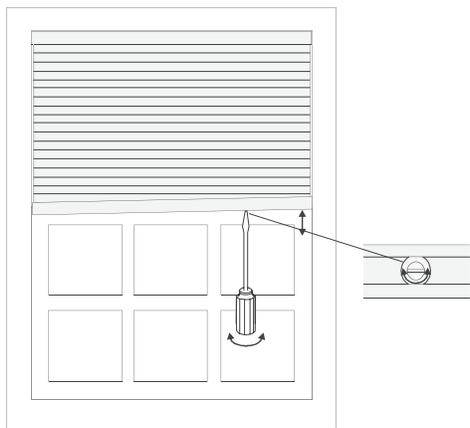


Level the Bottom Rail (If Necessary)

- Shades use a system that allows easy leveling of the bottom rail. It is designed to make slight adjustments (Less than 1”) to level the moving rails of your shade. It is not designed to make length adjustments. Use a flat head screwdriver or a coin (a quarter works best) to turn the adjustment screw in the bottom rail to raise or lower that side of the bottom rail.
- One quarter turn of the screw will move the bottom rail up or down approximately $\frac{1}{4}$ ”.
- Over-turning the adjustment screw (more than 1” of adjustment) can cause the cord to tangle or wedge inside the rail. The screw should turn easily - Do Not Force.

SHADE REMOVAL

Draw the shade completely up. (See “Shade Operation”) Push shade rail back and rotate the back of the shade down to release.

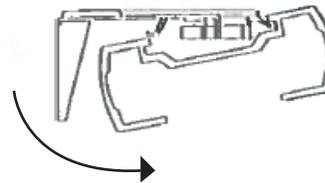

- Rotate the back of the headrail down and carefully lift the headrail off of the front hooks of the mounting brackets.

PROTECT YOUR CHILDREN

Be aware that it is possible for children to strangle in window covering cords. To reduce the occurrence of accident, all cords must be kept out of the reach of children, including infants. Cord cleats are an effective way to implement this essential precaution.



Mount the cord cleat at a safe height, taking into account furniture or other objects upon which a child may climb. Then after each use of the shade, simply wrap the excess cord around the cleat. It's fast, easy and safe.

To protect your children, we are pleased to provide cord cleats free of charge with every shade that we manufacture.



WARNING

Young children can STRANGLE in cord and bead chain loops and in the loop(s) above the cord connector. They can also wrap cords around their necks and STRANGLE.



- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

ANSI/WMCA A1001-2012 5.2.3



3DAYBLINDS®
YOU'LL LOVE THE TREATMENT
800-800-3329 | 3dayblinds.com