



3DAYBLINDS®
YOU'LL LOVE THE TREATMENT

Hudson Cornice Installation Instructions

GETTING STARTED

A few simple tools are required:



Steel Tape Measure



Pencil



Level
(for outside mount)



Power Drill and
Drill Bits



Flathead & Phillips
Screwdriver




Awl (or tool for starting
a screw hole)

Included in your order is all the hardware necessary for a normal installation. Depending on the mounting surface, fasteners other than the screws provided may be required. Wall board and plaster require the use of anchors such as expansion or toggle bolts. Bricks, tile and stone need special plugs and drill bits. Wood should always be pre-drilled to avoid splitting.


The Hudson Cornice is available with the following face heights: 4 1/2", 6", 8", 12", 16"

The Hudson Cornice is available with the following Return Sizes: 1 1/2", 2", 3", 4", 5", 6"



STANDARD HARDWARE

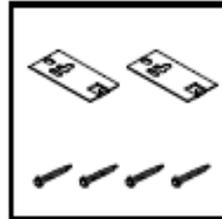



**Inside Mount
Bracket for
flush mount no
returns, 1 1/2",
2" Returns &
used with
Outside Mount
Bracket for 4",
5", or 6"
Returns**

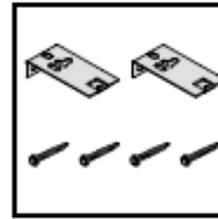

**Outside Mount
Bracket for 3"
Returns**

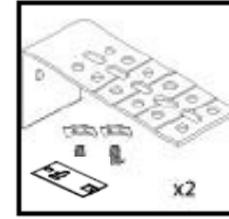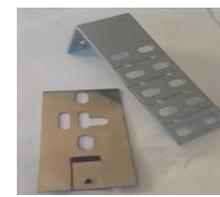


**Outside Mount
Bracket for
4", 5" or 6"
Returns**

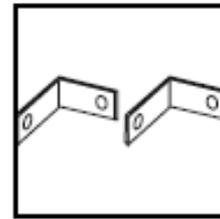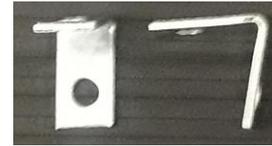



**Corner
Brace**

Valance / Splice Connector

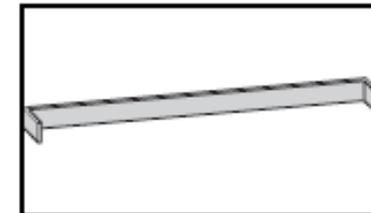

**Valance Connector (for
multi piece valances only)**

Hudson Cornice Exploded View

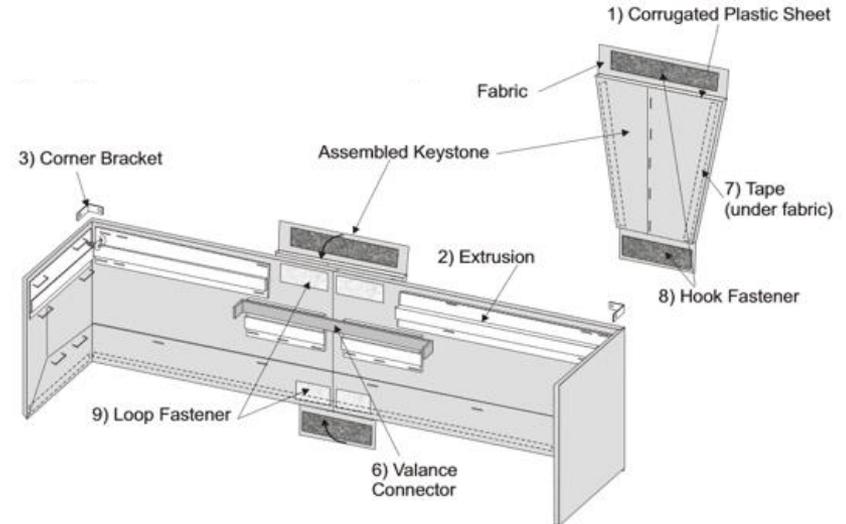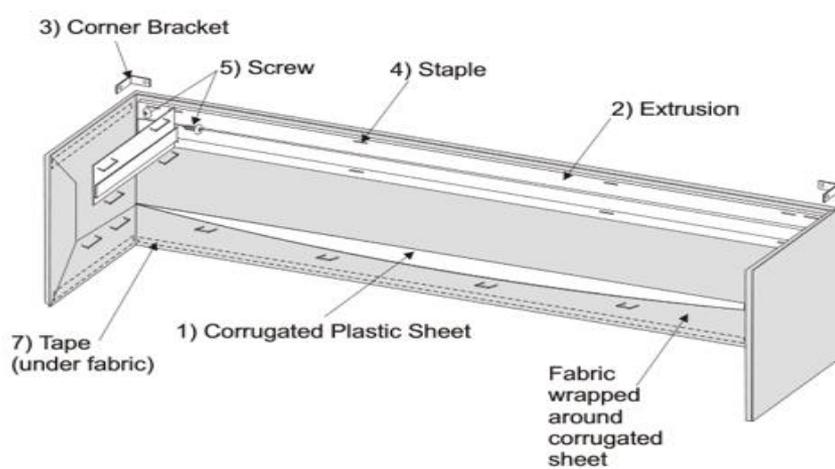

Minimums and Maximums

Minimum Width:

24"




Maximum Width:

216" (Fabrics pattern with usable fabric wide \leq than 77" are limited to 200").

STEP 1: VALANCE ASSEMBLY

KEYSTONE (IF VALANCE IS MORE THAN ONE PIECE)



- Lay valance pieces out on a flat surface end to end as shown.
- Insert valance connector into the lower plastic extrusion pieces.
- Slide the fabric keystone under the valance with the widest part at the top.
- Fold the top fabric flap down onto the hook & loop and press to adhere.
- Pull gently on the bottom of the keystone to remove any puckers or wrinkles.
- Fold fabric flap over and press to adhere.

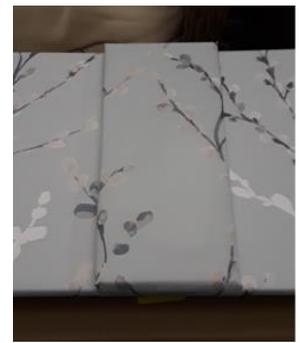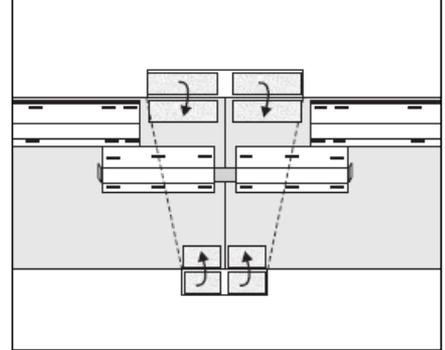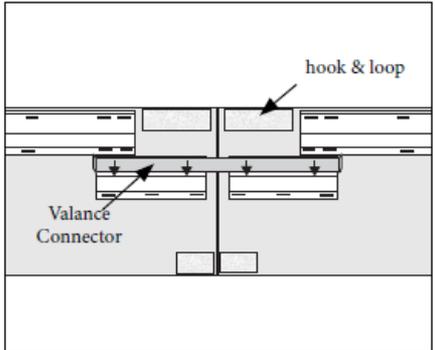

Keystone
Without
Valance
Connector

RETURNS

Fold returns and insert the corner brace into the white plastic extrusion to secure.

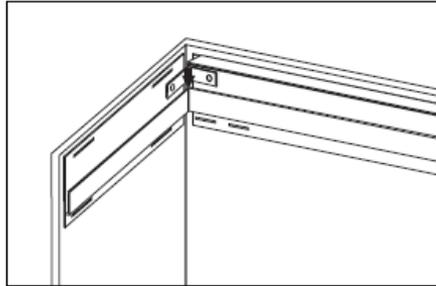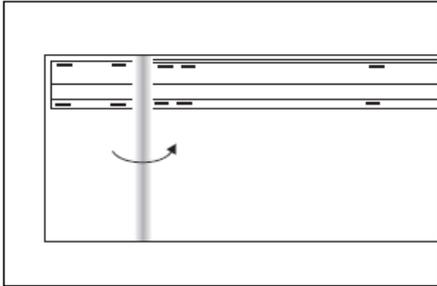

STEP 2: DETERMINE BRACKET PLACEMENT


If your valance requires the 2 piece bracket (only for 4", 5", & 6" Returns), bolt the pieces together before installing, make sure they are at the correct position for your return size (images below). 3" Returns only requires the valance bracket with no extension bracket.





For 4" Returns, third holes from front of Bracket.



For 5" Returns, second holes from front of Bracket.

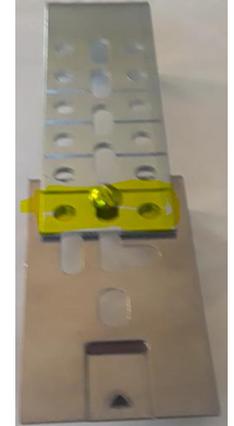


For 6" Returns, first holes from front of Bracket.

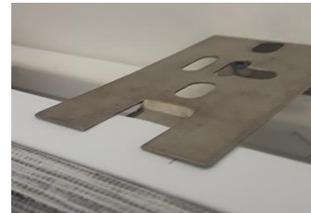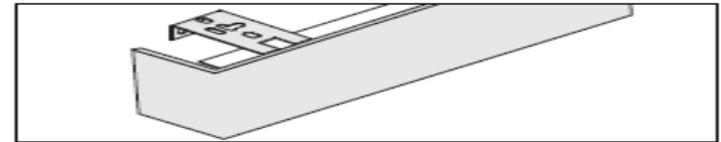


STEP 3: BRACKET INSTALLATION

Install your brackets either **inside**, **outside** or **nested** with your shade brackets.


It is often possible to nest the valance bracket with your window treatment bracket. Check to make sure that the holes will align before installing in this manner.

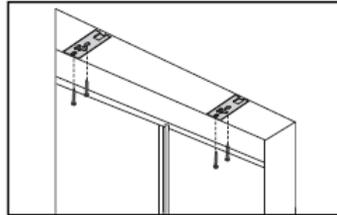

Inside Mount

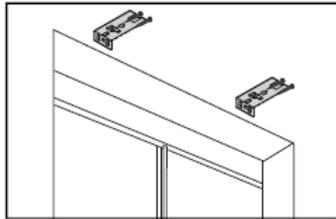

Outside Mount


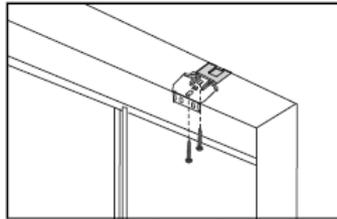


Nested Brackets

STEP 4: VALANCE INSTALLATION

Center the valance and press it onto the valance brackets.

Press firmly to secure it in place.

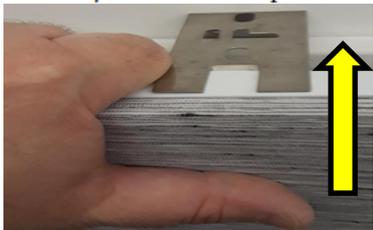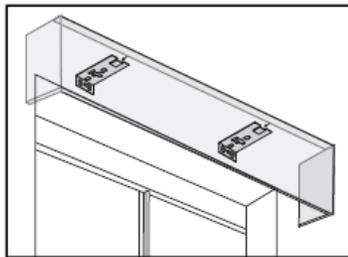

Valance Removal

Grab on to the front or back of valance near the brackets and pull straight out towards the room, may need to rock the valance back & forth to release from bracket.

