



Adjustable Coronado Valance™ Clip Installation Instructions


1) INSTALL SLIDE INTO BACK OF VALANCE

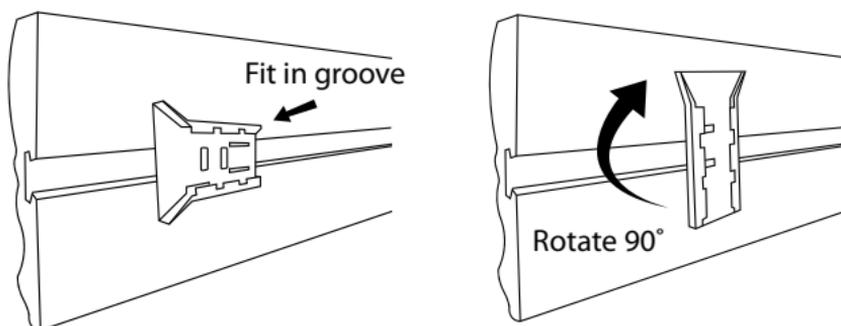

2) INSTALL CLIPS ONTO HEAD RAIL

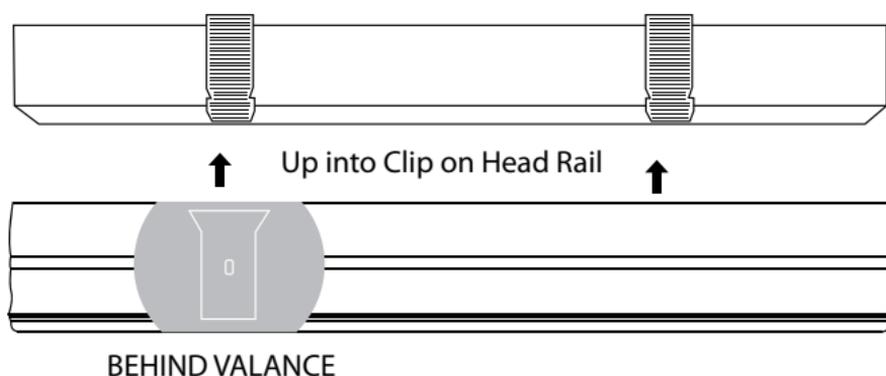

3) SLIDE VALANCE INTO CLIPS ON HEAD RAIL

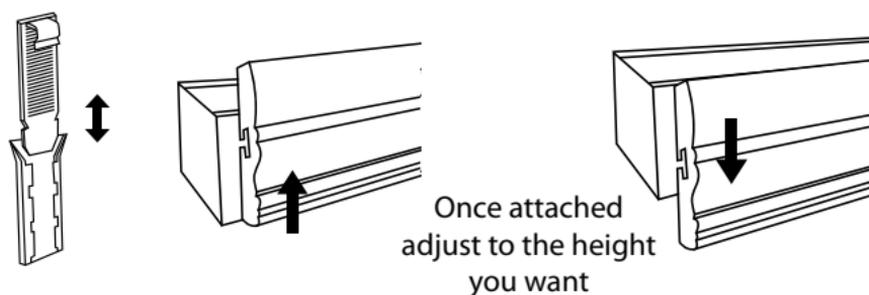

3 DAY BLINDS®

America's Window Covering Specialists® Since 1978

1-888-353-3DAY | www.3day.com

Part # 00001-010-000 Rev 12-07

© Copyright December 2007 | 3 Day Blinds, INC.